



Care & Maintenance

Hardwood

Unlike many store-bought products today, Display Shack uses real hardwood to construct your display. Stronger than most building materials, with the proper maintenance & care, your wood display can continue to look like new for decades.

Keep your display in a climate-controlled environment. Avoid placing your display in direct sunlight, or near sources of heating and cooling. Wood will react to changes in temperature and humidity which can damage the display. Regular dusting is recommended to keep your display looking shiny. For heavier cleaning, use a soft cloth with warm, soapy water. Avoid chemical products and use polishes sparingly as they tend to build up a film on the finish that will attract dust and soil.

Felt Backing

For displays with felt backing, we recommend using a felt brush (or a small brush with medium coarse bristles) to gently remove any dust and debris. Using a brush with too coarse of bristles may cause pilling. A small hand vacuum may also be used, however larger models could pull the felt away from the back or again cause pilling. If pilling does occur, you can use a pumice stone to smooth the appearance of the felt.

Acrylic Doors (PlexiGlass)

Our enclosed display cases have sliding clear acrylic doors. To keep them looking new, use only a damp soft cloth when cleaning (a drop of mild detergent can be added if necessary). Never use paper towels or chemical cleaners such as Windex or damage may occur.

 
Hanging wall displays

To keep the screws hidden and ensure your display sits flush with the wall, Display Shack uses keyhole slots for hanging our wall displays. And here's a solution for hanging them that works great.

Using a level that spans the length of your display, attach masking tape pieces at the keyhole locations. Keeping the level even with the top of the display, mark the locations of the slots on the tape (as shown right) If you want to center the display you can also add tape and mark this location. (For three slot displays this location will be your center hole)



Choose a mounting location for the display and mark the wall center location at the desired height. (Don't forget to account for the distance from the top of the display to the top of the keyhole slot) Then, place the level's center mark on the wall mark (making certain it's level) and transfer the screw location marks to the wall.

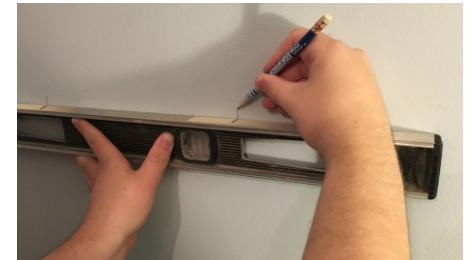

Finally, insert the mounting screws on the keyhole marks and hang your display. We recommend using the included self-drilling wall anchors when mounting to drywall locations with no wall studs.



displayshack.com